



# How to determine left or right hand locks

When ordering an asymmetrical lever design it is essential that the appropriate handing is specified. Symmetrical levers are easily reversed and do not require handing. See example below.

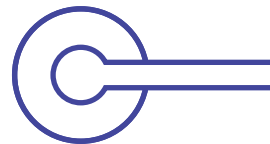

- Determine the handing of your door by standing on the outside of the door.
- If the hinge is on the right, it's a right handed door, and you need a right handed lock.
- If the hinge is on the left, it's a left handed door, and you need a left handed lock.

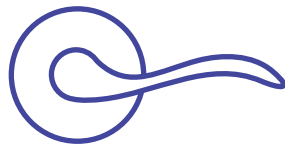